


Equalizer™ Transfer Kit



Refer to instructions on reverse side.

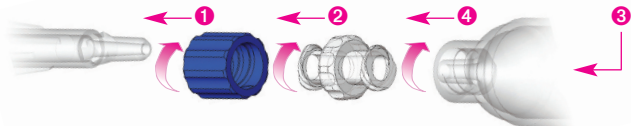

For Nordson EFD sales and service in over 40 countries, contact Nordson EFD or go to www.nordsonefd.com.

800-556-3484; +1-401-431-7000

info@nordsonefd.com

europe@nordsonefd.com

asia@nordsonefd.com

©2015 Nordson Corporation 7015876 v101515

Equalizer™ Transfer Kit

- 1 Place square opening on blue adapter over tip of static mixer and turn adapter clockwise approximately 1/8 turn to secure.
- 2 Insert one end of clear Luer-to-Luer fitting into blue adapter. Hold blue adapter and turn clear fitting clockwise to secure.
- 3 Insert piston into syringe and push to bottom of syringe. (Not Shown)
- 4 Hold clear fitting and turn syringe clockwise to secure.
- 5 Adjust dispenser settings for fluid viscosity and flow rate.

Caution

Apply pressure to back of piston during filling to prevent it from blowing out of syringe

- Hold Equalizer upright and actuate dispenser to fill syringe.