


Series 160AA Disposable Mixers for Quick Spray System

Nordson EFD's Series 160AA Quick Spray is a low-pressure air-assisted spray system for two-component coatings.

This disposable static mixer is designed for use with conventional meter/mix equipment or with Nordson EFD's two-component cartridge system. The reactive coating is mixed within the disposable static mixer. At the mixer outlet, air is introduced which atomizes the liquid stream. The degree of atomization can be adjusted by regulating the airflow rate. Since the reactive coating is contained completely within the mixer, cleanup is minimal.

Round Spray Pattern

- **The round air cap produces a full cone pattern, which is completely filled with spray drops. It is used on irregular surfaces, such as truck bed interiors.**

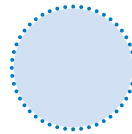

SAP # (AKA)	Mixing Elements	Element Diameter (inch/mm)	Pressure Limitation (Psi@75°F / Bar@23°C)	Air Cap Assembly
7700846 (160-624AA-4)	24	0.238 / 6.30	360 / 25	7701282 (171-AN-200)
7700920 (160-824AA-2)	24	0.366 / 9.30	300 / 21	7701282 (171-AN-200)

For Nordson EFD sales and service in over 30 countries, contact Nordson EFD or go to www.nordsonefd.com

East Providence, RI USA
USA & Canada: 800.556.3484; +1.401.431.7000
info@nordsonefd.com

Dunstable, Bedfordshire, UK
0800 585733; +44 (0) 1582 666334
Ireland 00800 8272 9444
europa@nordsonefd.com

China: +86 (21) 3866 9006
china@nordsonefd.com

Singapore: +65 6796 9522
sin-mal@nordsonefd.com

The Wave Design is a trademark of Nordson Corporation.
©2011 Nordson Corporation v022211

