

Clog-free, precise 781S MicroMark® spray system.

marking inks paints



Unique MM781-SYS MicroMark spray marking system produces round patterns and stripes from 5.0 mm to 30.4 mm (0.20" to 1.20") wide without overspray.

Programmable nozzle air delay after each spray cycle keeps the spray nozzle clog-free and reduces maintenance and downtime.

Compact marking system can be used to color-code similar components, indicate pass/fail, or show production or test status. It can be activated manually, or interfaced with other systems to mark at scheduled intervals or whenever a signal is received.



Features

- No clogging, dripping or drying out
- No missed shots
- **Consistent size and placement**
- Cycle rate exceeds 400/minute
- No mist or overspray
- Low-maintenance design

"The MicroMark is a virtually maintenance-free ink marking system that is easy to adjust. It is the standard marking system on every new balancing machine we produce."

Schenck Turner Inc.

Electronic pdf files of Nordson EFD manuals are also available at www.nordsonefd.com

www.nordsonefd.com info@nordsonefd.com USA 800.556.3484 Europe +44 (0) 1582 666334 Asia +86 (21) 3866 9006

Sales and service of Nordson EFD dispensing systems are available worldwide.


Nordson
EFD

MicroMark spray marking system



The complete MM781-SS system includes the 781S-28 dispense valve, ValveMate™ 8040 controller, and the 615DTL fluid reservoir.

Expert technical assistance and high quality standards ensure productive, trouble-free performance. Nordson EFD offers a full line of reliable dispensing systems to meet your specific application requirements.

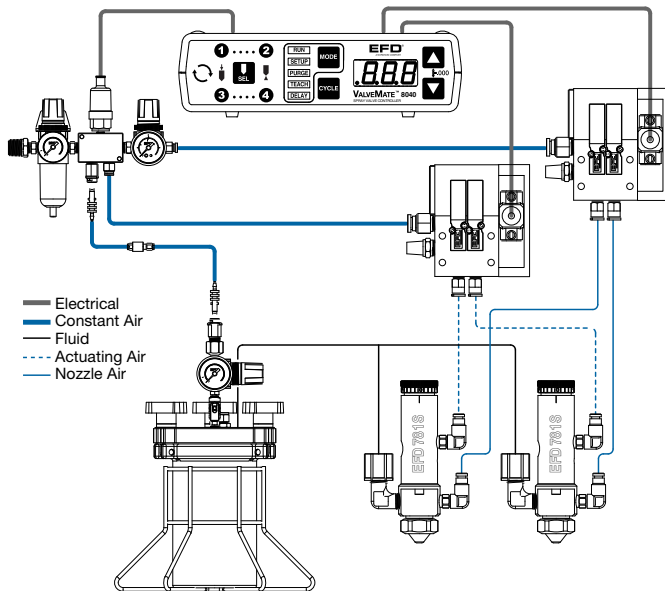

MicroMark 781S Valve

The precision spray valve features a nozzle with 0.7 mm (0.028") orifice and adjustable needle stroke for applying marks 5.0 mm to 30.4 mm (0.20" to 1.20") in diameter.

Adjustable Low Volume Low Pressure (LVLP) nozzle air transfers fluid from the nozzle to the part at low velocity and higher transfer efficiency.

Size: 104.6 mm x 26.9 mm diameter (4.12" x 1.06")

Weight: 235.3 grams (8.29 oz)

Actuating air pressure required: 70 to 90 psi (4.8 to 6.2 bar)

Maximum input fluid pressure: 300 psi (20.7 bar)

Fluid inlet thread: 1/8 NPT female

Mounting: (1) 1/4-28 UNF tapped hole or adjustable mounting block

Cycle rate: Exceeds 400 per minute

Air cylinder body: Hard-coated aluminum

Fluid body: Hard-coated aluminum


Air cap: Type 303 stainless steel

Piston: Type 303 stainless steel

Needle and nozzle: Type 303 stainless steel

Needle packings: Teflon®

All stainless steel valve parts are passivated.

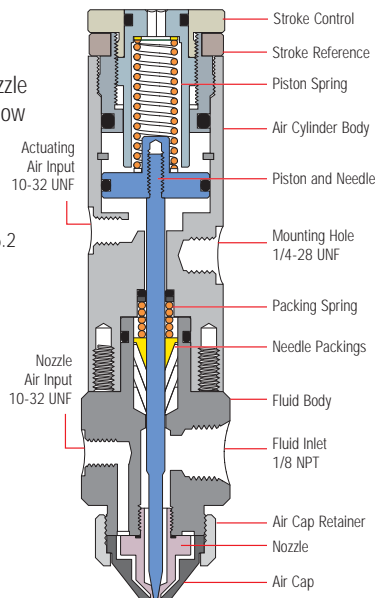

MicroMark 781S
75% actual size

Spray Area Coverage

model #	nozzle diameter	pattern	Nozzle distance from surface			
			25.4 mm (1")	50.8 mm (2")	76.2 mm (3")	152.4 mm (6")
781S-28	0.7 mm (0.028")	round	5.0 mm (0.20")	10.1 mm (0.40")	15.2 mm (0.60")	30.4 mm (1.20")

MicroMark Controller

Valve open time is the primary control of deposit size. The MicroMark controller adjusts valve open time and nozzle pressure. It puts push-button adjustment of valve open time where it needs to be — near the valve.

- Multi-valve control- up to (2) spray valves
- Partner to Programmable Logic Controller (PLC)
- Easy deposit size control
- Precise control of nozzle air pressure
- Nozzle air delay for clog-free operation
- Increased production output
- End user convenience
- Maximum machine efficiency

Automation: XYZ & XYZR Robot Dispensing Systems

Nordson EFD offers a wide selection of XYZ and XYZR robot systems that are fully compatible with ValveMate valve controller systems. Consistent, accurate, repeatable and complex dispensing applications can be easily performed with EFD robots, with working envelopes that range from 200 x 200 x 50mm to 510 x 510 x 100mm. Scara robot systems are also available for larger, heavier products or inline dispensing applications.

Fluid Reservoirs

The MicroMark system includes a 1.0 liter tank reservoir and one polyethylene liner.

The tank features full cover removal for easy liner replacement or to place a bottle into this top-ported tank. A 15 psi (1.0 bar) precision tank regulator ensures constant fluid pressure to the spray valve.

Options: 5.0 liter tanks and cartridge reservoirs can be specified. Cartridge sizes range from 2.5 to 32 ounces (75cc to 950cc).

For Nordson EFD sales and service in over 30 countries, contact EFD or go to www.nordsonefd.com

East Providence, RI USA
USA & Canada: 800.556.3484; +1.401.431.7000
info@nordsonefd.com

Dunstable, Bedfordshire, UK
0800 585733; +44 (0) 1582 666334

Ireland 00800 8272 9444
europe@nordsonefd.com

China: +86 (21) 3866 9006
china@nordsonefd.com

Singapore: +65 6796 9522
sin-mal@nordsonefd.com

Teflon is a registered trademark of DuPont.
The Wave Design is a trademark of Nordson Corporation.
©2010 Nordson Corporation v042010

